RadioShack®

User's Guide **6300509**

Multifunction

Travel Alarm Clock

Thank you for purchasing your Travel Alarm Clock from ***RadioShack****. Please read this user's guide before installing, setting up, and using your new clock.*

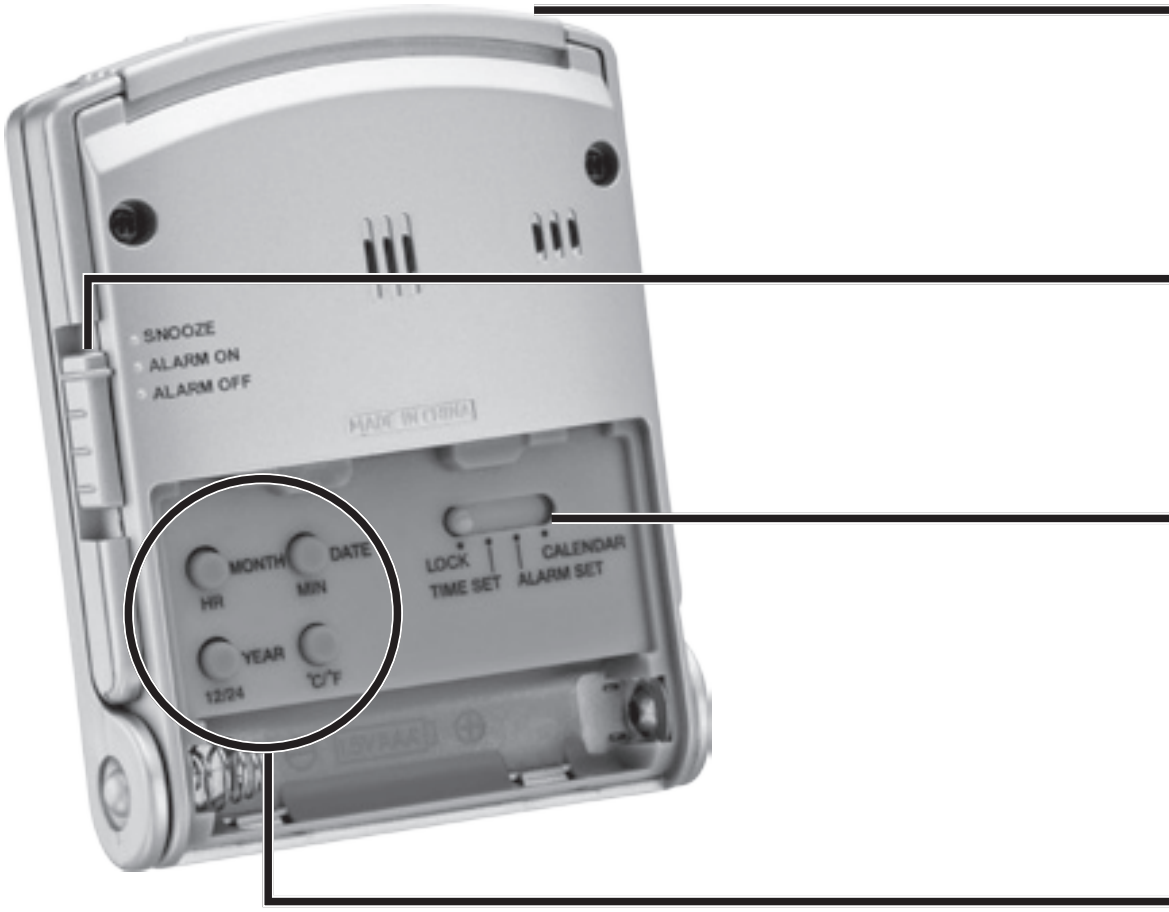

Package Contents

- Travel Alarm Clock
- User's Guide

Features

- Small, portable design
- Indoor temperature display

SNOOZE/ LIGHT

- Stop the alarm for 5 minutes (Snooze) or 24 hours (Alarm).
- Turn on the backlight.

SNOOZE/ ALARM ON/ ALARM OFF

- Turn the alarm on or off.
- Turn the alarm on with snooze function.

LOCK/ TIME SET/ ALARM SET/ CALENDAR

- Select option to set the time, alarm, or calendar.
- Lock the settings.

MONTH/ HR

Set the month or hour.

YEAR/ 12/24

Set the year or select hour format.

DATE/ MIN

Set the date or minute.

°C/°F

Select Celsius or Fahrenheit.

Install the Battery

Insert 1 AAA battery (not supplied) into the battery compartment, matching the polarity symbols (+ and –) marked inside.

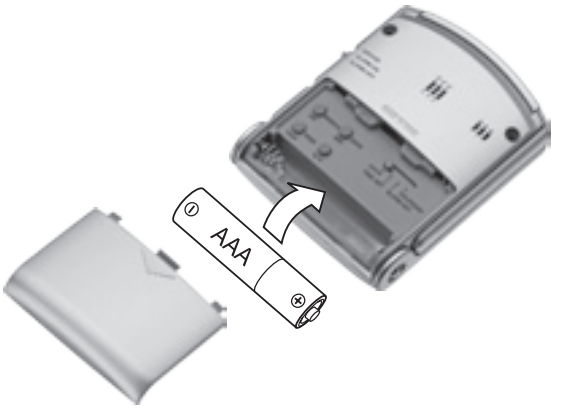

Battery Note:

- *Dispose of old batteries promptly and properly. Do not burn or bury them.*
- *Use only a fresh battery of the required size and type.*
- *If you do not plan to use your clock for more than a month, remove the battery. Batteries can leak chemicals that can damage electronic parts.*

Set the Date

1. Slide the switch inside the battery compartment to **CALENDAR**. The date flashes.
2. Press the **YEAR**, **MONTH** and **DATE** buttons to set the date. (Hold to set quickly.)

Set the Time

1. Slide the switch inside the battery compartment to **TIME SET**. The time flashes.
2. Press the **HR** and **MIN** buttons to set the time. (Hold to set quickly.)
3. Press the **12/24** button to select the time format.

***Note**: In 12-hour format, an AM or PM icon indicates morning or evening hours.*

Set the Alarm

1. Slide the switch inside the battery compartment to **ALARM SET**. The time flashes.
2. Press **HR** and **MIN** to set the time. (Hold to set quickly.)
3. Slide the switch to **LOCK** to exit.
4. Slide the outer switch:

- **ALARM ON** – (((•))) appears.
- **SNOOZE** – Zz appears.

At the set time, the alarm sounds for one minute. To stop the alarm:

- Press **SNOOZE / LIGHT**. The alarm stops for either 24 hours or a 5 minute snooze. (You can press **SNOOZE** up to 3 times).
- Slide the outer switch to **OFF**.

Care and Use

- Keep your clock dry; if it gets wet, wipe it dry immediately.
- Keep your alarm clock away from dust and dirt.
- Handle your clock carefully; do not drop it.
- Avoid contact with any corrosive materials such as perfume, alcohol, or cleaning agents.
- Do not subject the clock to excessive force, shock, dust, or high temperature or humidity. Any of these conditions may shorten the life of the clock.
- Do not tamper with any of the internal components of this clock. This will invalidate the warranty and may cause damage.

Specifications

Power ..... 1 AAA Battery
Battery Life ..... 12 Months

Specifications are subject to change and improvement without notice. Actual product may vary from the images found in this document.

Limited Warranty

RadioShack warrants this product against defects in materials and workmanship under normal use by the original purchaser for **ninety (90) days** after the date of purchase from a ***RadioShack***-owned store or an authorized ***RadioShack*** franchisee or dealer. ***RADIOSHACK*** MAKES NO OTHER EXPRESS WARRANTIES.

This warranty does not cover: (a) damage or failure caused by or attributable to abuse, misuse, failure to follow instructions, improper installation or maintenance, alteration, accident, Acts of God (such as floods or lightning), or excess voltage or current; (b) improper or incorrectly performed repairs by persons who are not

a ***RadioShack*** Authorized Service Facility; (c) consumables such as fuses or batteries; (d) ordinary wear and tear or cosmetic damage; (e) transportation, shipping or insurance costs; (f) costs of product removal, installation, set-up service, adjustment or reinstallation; and (g) claims by persons other than the original purchaser.

Should a problem occur that is covered by this warranty, take the product and the ***RadioShack*** sales receipt as proof of purchase date to any ***RadioShack*** store in the U.S. ***RadioShack*** will, at its option, unless otherwise provided by law: (a) repair the product without charge for parts and labor; (b) replace the product with the same or a comparable product; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of ***RadioShack***. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be

charged for repair or replacement of the product made after the expiration of the warranty period.

RADIOSHACK EXPRESSLY DISCLAIMS ALL WARRANTIES AND CONDITIONS NOT STATED IN THIS LIMITED WARRANTY. ANY IMPLIED WARRANTIES THAT MAY BE IMPOSED BY LAW, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY AND, IF APPLICABLE, THE IMPLIED WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE, SHALL EXPIRE ON THE EXPIRATION OF THE STATED WARRANTY PERIOD.

EXCEPT AS DESCRIBED ABOVE, ***RADIOSHACK*** SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO THE PURCHASER OF THE PRODUCT OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING

FROM INCONVENIENCE AND ANY LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT AND ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF ***RADIOSHACK*** HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. You may contact ***RadioShack*** at:

RadioShack Customer Relations
300 RadioShack Circle
Fort Worth, TX 76102 04/08

www.RadioShack.com

RoHS COMPLIANT

Complies with the European Union's "Restriction of Hazardous Substances Directive," which protects the environment by restricting specific hazardous materials and products.

Protect the environment by recycling used electronics. Go to E-CyclingCentral.com to find an electronic recycling center near you.

©2011. ***RadioShack*** Corporation.
All rights reserved. ***RadioShack*** and ***RadioShack.com*** are trademarks used by ***RadioShack*** Corporation.

Printed in China 01A12 6300509